
Installation and Users Guide

BMW Z4 Plain-Talk harness adapter kit

Version 2.0

“Plain-Talk Plus”

For ALL BMW E85: Z4 Roadster, Z4 Coupe, M Roadster, M Coupe



Table of Contents

	Page
1. Introduction	2
2. Installation and connection	4
3. Operation	7
4. Warranty/Disclaimer Information	8



The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by European Integrated Systems, Ltd. is under license. Other trademarks and trade names are those of their respective owner.

1. Introduction

Thank you for purchasing our “Plain-Talk Plus™” series Bluetooth® wireless technology mobile telephone interface. This interface is designed to provide integration of your BMW vehicle’s built in mobile phone capabilities and your Bluetooth® enabled mobile phone. Below is a list of components and tools that you will need. Some you should have received or may have purchased separately. This document is designed to be a supplemental guide to installation and is not a substitute for proficient knowledge and ability to successfully complete the installation. Please note that your vehicle may vary from what is depicted in this document and European Integrated Systems, Ltd (EIS) cannot be held responsible for damage as a result of improper installation. If you are not comfortable with what you read we encourage you to seek professional installation assistance.

You will need the following components to complete the installation:

- EIS “Plain-Talk Plus™” harness kit
- Parrot CK3200LS universal module and accessories.
- Parrot installation and operations guide
- Wire ties or tie-wraps, double sided tape
- Flat head and Phillips head screwdrivers
- Metric wrenches

This kit provides integration of the Parrot CK3200LS (“Plain-Talk Plus™”) hands free car-kits with the car’s stereo for radio mute and use of the built in BMW cell phone speaker(s). The radio display indicates "PHONE" when a call is in progress (Nav displays will not do this). We do not offer support for display of the calling number on the radio/instrument cluster with this product.

This harness is designed to make installing your car-kit easy! Without the need to cut or splice ANY wires on your BMW. You will still need to follow the instructions of your car-kit for mounting the control panel and microphone – this information is not discussed in this document.

2: Installation procedure

Gaining access to the necessary BMW connector"

Lets get to the trunk and locate the cabling you will need to have access to. You will need to pry back the trunk liner behind the seats on the drivers side. On the drivers side you will be looking in the small square hole as seen in this picture for a large black connector (likely wrapped in black foam).



Drivers Side behind seat: You will want to move the seat all the way forward and then gently pry the speaker cover off:




Look for the other side of the square hole next to the metal speaker. Here you see the bundle of wires that runs to the trunk.


Next you will feed the Plain-Talk harness from the back seat area towards the trunk - feed the end that mates to the trunk side connector seen above.




Here we see the cable fished through to the trunk. Mate these connectors together. At this point we are done in the trunk.

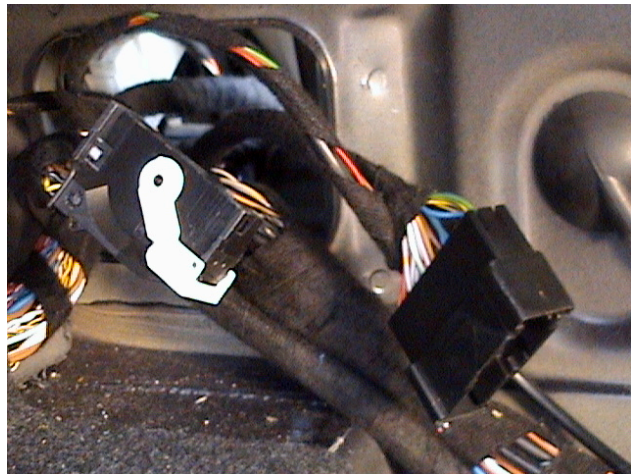

This is what you should see now in the cabin:

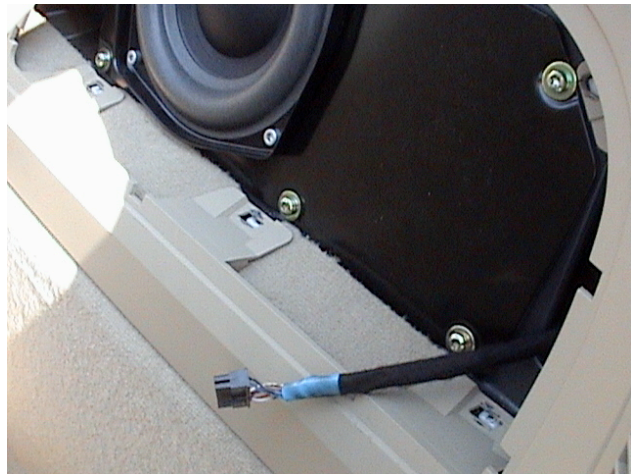

Now, attach the harness and the Parrot connector and mount with double sided tape.


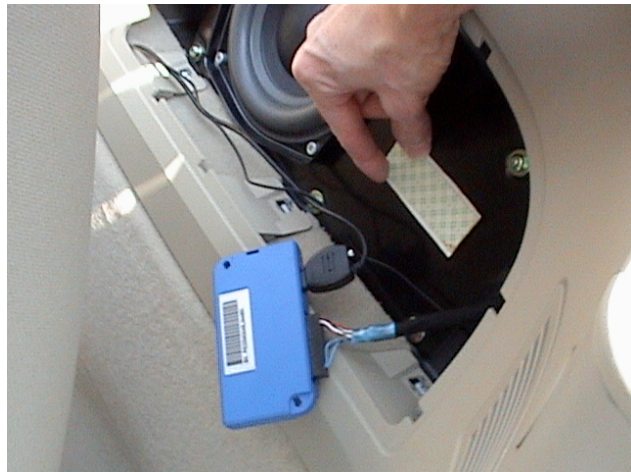


Running the Parrot wiring and mounting control box:

Now that you have the Parrot module mounted you can run the wiring for the control unit and the mic. Please note that the mounting locations are a suggestion but you may choose another location if you choose.



Here we are running the wires under the center console covers up to the front of the vehicle:

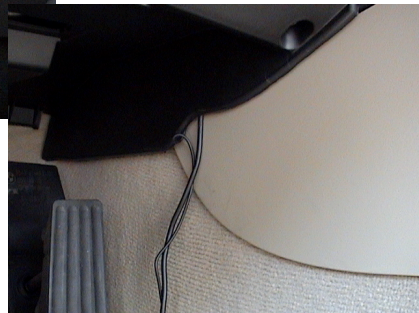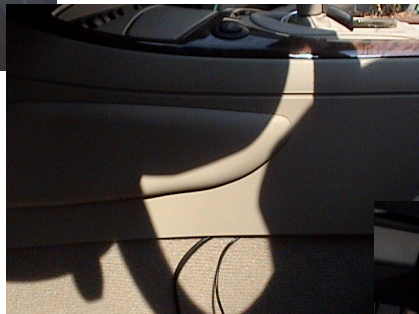

3: Display and head unit Operation

Note: Please refer to your Parrot documentation for operation, pairing, and configuration instructions.

1. Your “Plain-Talk” harness provides integration with your BMW.
2. Your radio will mute when a call comes in or you activate a voice command in the Parrot system, CDs or tapes will pause and your music will resume when your call is ended.
3. All audio will come through your BMW factory cell speaker system.
4. Your harness also provides switched power to your Parrot kit so that it will automatically turn on and off when you start and stop your vehicle.
5. Below are mounting suggestions but, again, you are free to choose alternatives at your discretion.



4: Warranty and Product Disclaimer

We stand behind every product we sell and we want you to feel that you have made a sound decision to purchase from us. We are grateful that you have taken one further step to safer driving and encourage you to remember that your first priority is always to driving your car, being attentive, and being safe.

We warrant this product against defects in material and workmanship as follows:

Your module is backed by our 1 year performance warranty – this includes repair or replacement for failures resulting from defects in manufacture. If, upon return of product, it is determined to be defective, European Integrated Systems, Ltd. (“EIS”) will repair or replace the Product at no charge during the warranty period. Your retailer may provide an additional/extended warranty or contract. Please contact your retailer for assistance.

This warranty does not cover cosmetic damage or damage due to improper installation, to acts of God, accident, misuse, abuse, negligence, commercial use, or modification of, or to any part of the Product.

Return of your product for a refund is subject to the policies of your retailer.

EIS cannot be held responsible for failures resulting from installation errors or modifications.

To the extent permitted by law, all warranties are waived, other than the warranty stated above. The warranties of merchantability and fitness for a particular purpose are waived to the extent provided by law.

Product Disclaimer

Repair or replacement as provided under the warranty (above) is the exclusive remedy of the consumer. EIS shall not be liable for any incidental damage, including but not limited to damage, real or perceived, to your vehicle due to installation and use of this product, or consequential damages for breach of any expressed or implied warranty on this product. Except to the extent prohibited by applicable law. To the extent permitted by law, all warranties are waived, other than the warranty stated above. The warranties of merchantability and fitness for a particular purpose are waived to the extent provided by law.

Designed and Manufactured by:

European Integrated Systems, Ltd.

5962 Zebulon Rd. Suite 332

Macon GA 31210 USA

+1-404-835-7457

WWW.EISKITS.COM